
4G LTE NETWORK MOBILE RADIO USER'S MANUAL

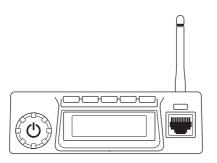


Packing List

Please unpack carefully and check that you have received the following items. If any item is missing or damaged, please contact your dealer.

Item	Quantity (PCS)	Item	Quantity (PCS)
Mobile Radio	1	Palm Microphone	1
Mounting Bracket	1	Antenna	1
Mounting Bracket Screw	7	Power Cord	1
GPS Antenna	1	User Manual	1

Product Overview

Product Layout

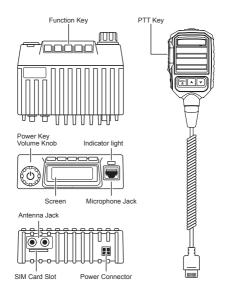

Key Definition

Key	Definition
0	Power On/Off , Volume Knob Long press 3s to turn on/off. Adjust clockwise to increase volume.
	OK button Short press to confirm the function in menu interface, long press to enter <group> in standby interface.</group>
	Exit button Short press to return to function. Long press to lock or unlock keyboard in display interface.
MENU	Menu button Menu functions
	Up button Short press to move the function up in menu interface, long press to enter <member> in display interface.</member>
	Down button Short press to move the function down in menu interface, long press to enter <friend> in display interface.</friend>

Menu Function

1. Group

Press the menu button on the standby interface, select the group selection, press the up and down keys to select, press the menu key to confirm the selected group, and press exit key to return to the upper option.

2. Member

Press the menu button on the standby interface, select the member selection, press the up and down keys to select, press the menu key to confirm the selected member, and press exit key to return to the upper option.

3. Friend

Press the menu button on the standby interface, select the friend selection, press the up and down keys to select, press the menu key to confirm the selected friend, and press exit key to return to the upper option.

4. Set

Press the menu button on the standby interface, select the set selection, press the up and down keys to select different functions.

- 1) Tx&Rx Beep: set Tx beep, Rx beep and off;
- Audio Quality: Set standard sound quality or high-definition sound quality, different sound quality cannot talk to each other normally;
- BackLight: Set the length of time that the backlight will automatically turn off when there is no operation or intercom;

- Standby Display: Set <display time> or <screen off> in standby;
- Online LED: Turn on this function, the breathing light will flash when the account is logged in;
- LCD Contrast: Set the contrast of the LCD to level 0, level 1, level 2, level 3;
- Single Call Time: Set the time to automatically exit single call/group call when there is no intercom;
- Menu Hang: Set the time for automatically returning from the menu to the standby interface when there is no operation;
- Power on Display: Set the boot display picture> or <text>
 you can edit the text through the <Logo information> column of the programming software;
- 10) Key Lock: Set <Auto> or <Manual> to lock the keys;
- Screen Rotate: Set the display to show text in <normal> or <upside down>;
- 12) Time Zone: Set the required time zone;
- 13) Network Mode: Set the network connection mode;
- ACC Power On: After turning on this function, the radio will automatically turn on when it detects ACC voltage;
- ACC Power Off: After turning off this function, the radio will automatically shut down when there is no ACC voltage.

- 5. Owner User: show current member name and group.
- 6. Info:
 - 1) Message: message list and delete all;
 - 2) Account: account number, current group and member;
 - Version: module, POC, platform, hardware and software version:
 - 4) IMEI Info: IMEI number;
 - 5) GPS info;
- 7. Current Time: show current date and time.

Care and Cleaning

To guarantee optimal performance as well as a long service life of the product, please follow these tips.

Product Care

Do not pierce of scrape the product.

Keep the product far away from substances thea can corrode the circuitry.

Do not hold the product by the antenna or earpiece cable.

Product Cleaning

Clean up the dust and fine particles on the product surface and charging piece with a clean and dry lintfree cloth or a brush regularly.

Use neutral cleanser and a non-woven fabrice to clean the keys, knobs, and front case after long-time use.

Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations, so as to avoid surface case damage.

Make sure the product is completely dry before use.

Caution

Turn the product off before cleaning.